

# Home Control Siren



first steps

# Thank you for placing your trust in this devolo product.

Carefully read all instructions before setting up the device and store the instructions for later reference.

#### **Icons**



Very important note. Failure to observe this note may result in damage.



Important note that should be observed.



Background information and configuration tips for your device.

#### Intended use

Use the Home Control Siren as described in these instructions and in the Home Control online help to prevent damage and injuries.

### **CE** conformity



When used as intended, the product conforms to the basic requirements of the directives 2014/53/EU, 2014/35/EU and the other relevant provisions of the Radio and Telecommunications Terminal Equipment Act (FTEG) and is designed for use in the EU, Switzerland and Norway. A printout of the CE declaration is included.

### Safety notes

For general safety instructions, please refer to the chapter **Safety notes** on page 9.

#### devolo Home Control

Home Control (also known as home automation) refers to the specific control of electrically operated indoor household devices. The Home Control system from devolo uses the Z-Wave<sub>TM</sub> wireless standard.

A Home Control system requires a Z-Wave<sup>™</sup>-compatible control unit such as the Home Control Central Unit from devolo. Use its Home Control Portal to coordinate the Home Control Siren and all other Home Control devices. You can access the Home Control Central Unit through the **my devolo app** and at <a href="https://www.mydevolo.com">www.mydevolo.com</a> in a browser.

For more information about setting up the Home Control Central Unit, please refer to the installation guide and/or Home Control online help. You can find the product's installation video online at <a href="https://www.devolo.eu/home-control">www.devolo.eu/home-control</a>.

Accessing the Home Control Central Unit via the my devolo app (for smartphone/tablet)

Open the **my devolo app** Dhome Control and select your Home Control Central Unit.

Accessing the Home Control Central Unit via web browser (PC/laptop)

At www.mydevolo.com Department Home Control Select your Home Control Central Unit.

For more information on the control and configuration of all devolo Home Control devices, as well as application examples, please refer to the Home Control online help.



### The Home Control Siren

The Home Control Siren is an optical and/or acoustic detector for your Home Control and makes your home more secure. As a line-powered Z-Wave<sup>™</sup> repeater, it has an integrated battery, which supplies the device with power for up to 24 hours in the event of a power failure.



For more detailed descriptions of the Home Control Siren functions, refer to the Home Control online help. You can find the product's installation video online at <a href="https://www.devolo.eu/home-control">www.devolo.eu/home-control</a>.

### Installing the Home Control Siren

The Home Control Siren is shipped with the alarm function switched off by default. As soon as the device has been added to the Home Control network, a removal alarm is enabled automatically. This alarm would be triggered for 3 minutes if the siren is removed from the housing bracket. This removal alarm can be disabled via the Home Control Central Unit.



The device creates a loud and shrill alarm tone that can cause hearing damage. Stay a minimum distance of about 50 cm away from it.



Only use the Home Control Siren indoors. It is possible to mount it on the ceiling or a wall.


To ensure the best possible wireless range for the Home Control Siren, avoid positioning it behind objects that block the signal (attenuation) and avoid interference sources. Weak signals due to attenuation can result from furniture, plants and especially metal objects which are located between the devices. Possible sources of interference include electrical devices such as a microwave or computer. In such instances, keep your device at least around 50 cm away from the source.

- Select a power socket taking into account the above-mentioned factors.
- ② Disconnect the device from the housing bracket by pushing the bracket down and away.




### If installing on a wall using screws, make sure that no gas, water or power lines in the wall get damaged. There is a danger of electric shock!

- ③ Drill holes into the desired location based on the drill template (max. of 2 m away from the power socket).
- Route the provided USB cable (with the USB symbol of the micro USB connector facing forward) behind the housing bracket and into the guide intended for the cable.

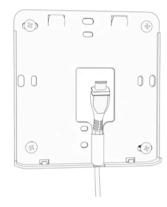

⑤ Screw the housing bracket on securely in the correct installation position using the included screws.

6 Plug the micro USB connector into the internal socket on the rear of the device.

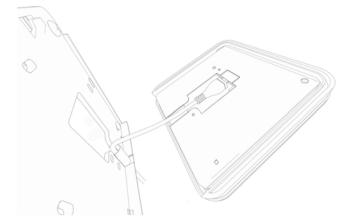

- ② Slide the Home Control Siren from top to bottom onto the housing bracket fastened to the wall.
- Plug the USB connector of the cable into the mains adapter, but do not yet plug the mains adapter into the power socket.

### Registering the Home Control Siren on the control unit (e.g. devolo Home Control Central Unit)

- When you plug in the Home Control Central Unit from devolo, follow the description in the section devolo Home Control on page 3 to call up your Home Control Central Unit and select Devices 
  Add device (+ symbol) 
  devolo Home Control Siren. Follow the instructions there to log into your Home Control Central Unit. You can conveniently take electronic control using the Home Control Portal of the Home Control Central Unit.
  - For more information on the control and configuration of all devolo Home Control devices, as well as application examples, please refer to the Home Control online help.

## Safety notes

You must read and have understood all safety and operating instructions for your devolo devices; keep these instructions safe for future reference.



### **DANGER** due to electricity

Users do not need to carry out any maintenance on the device. In the event of damage, disconnect the device from the mains supply by unplugging the mains plug from the power socket. Then contact qualified specialist personnel (after-sales service) exclusively. Damage is deemed to have occurred, for example,

- if the power plug is damaged
- if the device has been showered with liquid (e.g. rain or water).
- if the device is inoperable.
- if the housing of the device is damaged.

The power socket should be easily accessible so that you can pull out the mains plug quickly if needed.

The device must be operated exclusively on a public mains power supply as described on the rating plate.

Use only the provided mains adapter for the power supply.

Use the device only in a dry location and indoors.

**Disconnect the device from the mains supply to clean!** Avoid cleaning agents containing solvents, since they can cause damage to the housing. Only use a dry towel for cleaning.



### **DANGER** due to overheating

The device should only be installed at locations that guarantee adequate ventilation. Slots and openings on the housing are used for ventilation:

- Do not cover the device when it is operating.
- Do not place any objects on the device.
- Do not insert any objects into the openings of the device.
- Do not place the device directly next to open flame (such as fire or candles).
- The device must not be exposed to direct radiated heat (e.g. radiators, direct sunlight).

It is normal for the housing to get a little warm when the device is plugged in.

## Service and warranty

Warranty: 3 years

If your devolo device is defective when first used or within the warranty period, please contact the supplier where you bought the devolo product. The supplier will handle getting a replacement or repair for you from devolo. For the complete warranty terms, please visit our website at <a href="https://www.devolo.com/warranty">www.devolo.com/warranty</a>.

Great Britain	+44 203 0241 838 *	support@devolo.co.uk
Portugal	+351 707 200 896 *	support@devolo.pt
Spain	+34 902 887 682 *	support@devolo.es
Sweden	+46 771 400 480 *	support@devolo.se
Other countries	+49 241 70 525 18 *	support@devolo.com

<sup>\*</sup> Detailed information about the actual costs of the telephone calls can be found on the devolo website.

### Disposal

Neither the Home Control Siren nor the integrated battery may be disposed of with the household waste. Instead, you can return these at no charge at your municipal collection point or at the retailer (e.g. supermarket, specialist shop).

# devolo

devolo AG Charlottenburger Allee 60 52068 Aachen – Germany www.devolo.com